
## INSTRUCTIONS FOR CENTER LINE AND DTM EXPORTS FROM INROADS TO SURVEY CONTROLLER USING UPLOAD TRIMBLE ADD-IN TRANSLATOR

Note: Open Microstation and Inroads. Open ALG and DTM files.

Before the Translator can run an Application Add-In has to be activated from the Inroads Tool.

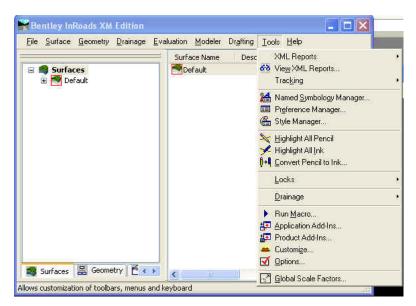

The Application Add-in should be 3<sup>rd</sup> or 4<sup>th</sup> from the bottom of the list. Select OK

| 1.5.9 H I I I I  |        |          |        |         |        |        |         |          |          |       |
|--|--------|----------|--------|---------|--------|--------|---------|----------|----------|-------|
| vailable:  |        |          |        |         |        |        |         |          |          | OK.   |
| _ Translate Leica DBX Add-In<br>≪Traverse Edit Add-In  |        |          |        |         |        |        |         | ^        | C        | ancel |
| Tunnel Surface Commands Add-In   |        |          |        |         |        |        |         |          | <u> </u> | ancer |
| Turnouts Add-in  |        |          |        |         |        |        |         |          | l I      | Help  |
| Upload Trimble Add-In  |        |          |        |         |        |        |         |          |          |       |
| Variable Manager Add-In  |        |          |        |         |        |        |         |          |          |       |
| View Drainage as Solids Add-In   |        |          |        |         |        |        |         |          |          |       |
| Visualization Add-In   |        |          |        |         |        |        |         | 目        |          |       |
|  |        |          |        |         |        |        |         | <u> </u> |          |       |
| The Active Project Settings Add-In pro   |        | oating ( | dialog | that di | splays | the ac | tive su | irface,  | horizo   | ntal  |
| The Active Project Settings Add-In pro<br>and vertical alignments and superelev  |        |          | dialog | that di |        | the ac |         | uface,   | horizo   |       |
| The Active Project Settings Add-In pro<br>and vertical alignments and superelev<br>Command   | ation. |          |        |         |        |        | N.      |          |          |       |
| The Active Project Settings Add-In pro<br>and vertical alignments and superelev<br>Command   |        |          | dialog | that di |        | the ac |         | uface,   | horizo   |       |
| The Active Project Settings Add-In pro<br>and vertical alignments and superelev<br>Command   | ation. |          |        |         |        |        | N.      |          |          |       |
| Description<br>The Active Project Settings Add-In pro<br>and vertical alignments and superelev<br>Command<br>Commands placed in Tools menu | ation. |          |        |         |        |        | N.      |          |          |       |

From the File drop down list select Translators then Upload Trimble.

| Be | entley InF  | Roads XM  | Edition                              |  |                                      |   |                            |     | _ 🗖 🗙            |   |  |
|----|---|---|--------------------------------------|--|--------------------------------------|---|----------------------------|-----|------------------|---|--|
|    | Surface<br>New<br>Open<br>Save<br>Save As<br>Close<br>ProjectWisi<br>Broject Def<br>Text Import<br>Import<br>Export<br>Iranslators<br>1 pw://kytc | <u>G</u> eometry<br>e Organizer.<br>aults<br>Wizard | Drainage<br>                         | Evaluation   |                                      | Alg Files.a                             | 57 January 1997            | N = | LandXML Tran     |   |  |
|    | 2 pw:\\kyto<br>3 pw:\\kyto<br>4 pw:\\kyto   | :p00w02:K\<br>:p00w02:K\<br>:p00w02:K\              | 'TC-Main\D<br>'TC\Survi<br>'TC-Main\ | BRE 10-5011<br>o\Survey S<br>ey Support\2<br>SelectCAD\<br>\Digital Ma | Support\20<br>046-266_9<br>2046-266_ | 146-266_pl<br>iurface-onl<br>Surface-or | an.dtm<br>y.dtm<br>ily.dtm |     | 💕 Upload Trimble | a |  |

Note: When Apply is selected a registration notice from Trimble will pop up if this is the first time using this Add-in. Fill out the registration and agree to the User Agreement. A key code will be given to you to place in the Key in box. Select Ok (you should only have to do this once). Click on the link, register and type in your Authorization code.

| Before you can use Trimble Link you must accept the terms<br>an online registration form (using the link below) to obtain the<br>free.   |   |  |         |
|--|---|--|---------|
| Note: By clicking on the link below you will be leaving the cu<br>website. After registering, close your web browser, and you i  |   |  |         |
| Software License Agreement   |   |  |         |
| TRIMBLE NAVIGATION LIMITED<br>END USER LICENSE AGREEMENT   |   |  | -       |
| includes any computer software (whether stored on digital or<br>including upgrades and updates, and accompanying printed<br>("Software"). BY CLICKING "YES" IN THE ACCEPTANCE I<br>USING THE SOFTWARE, YOU AGREE TO BE BOUND B'<br>AGREE TO THE TERMS OF THIS AGREEMENT, PROMP<br>COPIES OF THE SOFTWARE. This Software is protected b<br>other intellectual property laws and treaties. The Software is<br>1 SOFTWARE PRODUCT LICENSE | d materials and any "online" of e<br>BOX, OR BY INSTALLING CO<br>Y THE TERMS OF THIS AGRE<br>TLY UNINSTALL AND/OR OT<br>by copyright laws and internation | electronic documentation<br>PYING OR OTHERWISE<br>EMENT. IF YOU DO NOT<br>FHERWISE DESTROY ALL | is<br>T |
|  | Yes, I Agree  | No, I Don't Agre   | e       |
| http://www.  | trimble.com/tlsreg.asp  |  |         |
| Authorization code:  |   |  |         |


Select the alignment that is to be staked out. Make sure the Linear Units are US Feet then Apply.

| Geometry Projec                     | 02107                 | ~ [                  | Apply |
|-------------------------------------|-----------------------|----------------------|-------|
| Horizontal Alignn<br>Name           | nents:<br>Description |                      | Close |
| EnglishStationU                     |                       | De<br>De<br>De<br>De | Help  |
| GillilandRoad<br>I-64 cl<br>KY 1531 | WHI-                  |                      |       |

English Station Ultimate was the Center Line selected and saved as a Trimble DC file in DC File version 10.7. The file is being saved to the desktop but can be saved in a folder or another drive.

| ive As                 |                |                        |    |    |   |       | ?      |
|------------------------|----------------|------------------------|----|----|---|-------|--------|
| Save in:               | 🎯 Desktop      |                        | *  | 00 | P | •     |        |
| My Recent<br>Documents | 🛅 Statewide Su | r<br>Places            | 12 |    |   |       |        |
| My Computer            | File name:     | EnglishStationUltimate |    |    | × | ] [   | Save   |
|                        | Save as type:  | Trimble DC file (*.dc) |    |    | ~ | 1     | Cancel |
| My Network             | sans as gps.   |                        |    |    | 1 | E 112 |        |

The next panel that pop's up will have a TTM extention (Trimble Terrain Model). Select Cancel if you are only importing Centerlines. The TTM file extention is created from the active DTM in Inroads. Save your named TTM file to the desktop or folder where it can be easily found. Once saved select cancel.

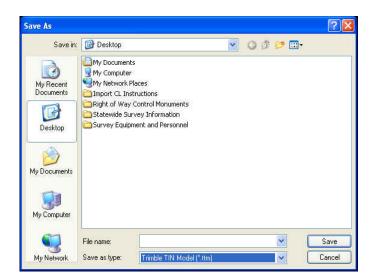

Connect your Trimble Controller to your desktop or laptop computer and turn it on. Active Sync should have detected your controller and a connection panel will pop up.

| Select cancel  | /Select Explore      |
|--|----------------------|
| Synchronization Setup Wizard<br>Welcome to the Pocket PC Sync<br>Setup Wizard<br>To set up a sync partnership between this computer and<br>your Pocket PC, click Next.<br>If you click Cancel, you can still:<br>Copy and move files between your Pocket PC and<br>this computer<br>Add and remove programs on your Pocket PC<br>Add and remove programs on your Pocket PC | Microsoft ActiveSync |



Drag and drop the created DC file into your job folder. Typically a DC file will have a mini controller for an icon. If you are going to stake out a DTM drag and drop it into the same folder. Close the window and go back to the Controller.

٠

Help

Folders

💌 🔁 Go 🛛 Links 🎽

Modified


| 🚍 Trimble Data                       |             | 🚭 I-64 Job   |                  | ×  |
|--------------------------------------|-------------|--|------------------|----|
| File Edit View Favorites Tools Help  | <b>.</b>    | File Edit View Favorites Tools Help  |                  |    |
| 🚱 Back 🝷 🕥 🚽 🏂 🔎 Search 🎼 Folders  🏢 | -           | Search 🕞 - 🎓 Search 🌔 I  | Folders          |    |
| Address 🛅 \Trimble Data 💽 🗲 G        | o Links »   | Address 🛅 \Trimble Data\I-64 Job   | 💌 🄁 Go 🛛 Links 🤅 | »  |
| Name S                               | iize Type 🔺 | Name   | Size             |    |
| CD1 Bridge Piers                     | File Fc     | 🛅 Import   |                  |    |
| Export                               | File Fc     | 🥐 EnglishStationUltimate   | 976 bytes        |    |
| E FASTEST                            | File Fc     | nteri se al la companya de la compan | 4.44KB           |    |
| 🗀 I-64 DTM Stake                     | File Fc     | 💞 GillilandRoad  | 944 bytes        |    |
| E I-64 Job                           | File Fc     | 🥐 I-64 cl  | 2.04KB           |    |
| E I-65 Job                           | File Fc     | 🧳 КҮ1848   | 1.16KB           |    |
| 🚞 Import                             | File Fc     | 💞 KY1848PhaseII  | 1.23KB           |    |
| 🗀 Ky 1494                            | File Fc     | 💞 KY1848PhaseIII   | 1.13KB           |    |
| C 46.20                              | File Fc     | 💞 Ramp1_March2009  | 1.13KB           |    |
| C VRS TEST                           | File Fc     | 💞 Ramp3_March2009  | 0.99KB           |    |
| 🗀 Wolfe Co                           | File Fc 🖵   | Ramp5_March2009  | 1.08KB           | -  |
|                                      | • //.       |  | Þ                | 1. |

From the controller main menu select Files and drop

|  | New job  | 100%               | File Zoom Too | dis Help   |                |
|--|--|--------------------|---------------|--|----------------|
|  | \ <u>O</u> pen job                             |                    | 🦺 🛛 Job: I 64 | 💬 🛱 📢 11   | :00 ok         |
| 1 and a second s | Review current job<br>Point manager            | 1                  |               | Send data to another device<br>Receive data from another dev | IO%<br>/ice    |
| <u>F</u> iles  | QC Graph<br>Map of current job                 |                    | Files         | Export fixed format files<br>Import fixed format files       |                |
| M 🗌  | Properties of current job<br>Copy between jobs | Map<br>Menu        | 500           | Export custom format files<br>Import custom format files     |                |
| - TV 🛝   | Import / Export                                | Favorites          |               | Email  |                |
| <u>S</u> urvey   | <u>W</u> indows Explorer                       | S <u>w</u> itch to | Survey        | Eile Transfer Application                                    | es<br>Witch to |

down to Import/Export.

From name select the DC file name that was saved on the desktop or folder.

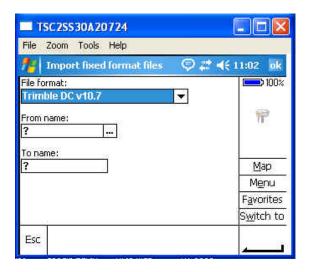

## Select Import fixed format files

Once the DC file in the "From name:" is selected the "To name:" will populate the key-in with the same name unless you change it. Tap Accept. This will bring you back to the main survey controller menu.

| TSC2SS30A20724                      |                            | 👭 🛛 Job: I-64 J | lob\GOHMAN     | і јов 👘 🛞 📰        | 🗧 🖂 🗙              |
|-------------------------------------|----------------------------|-----------------|----------------|--------------------|--------------------|
| File Zoom Tools Help                |                            |                 | 1              |                    | 100%               |
| 👎 Import fixed format files 🛛 🗭 🖨 📢 | € 11:06 ok                 |                 | $\sim$         |                    |                    |
| File format:                        | 100%                       |                 | C.A.           |                    |                    |
| Trimble DC v10.7                    | (1999)                     |                 |                |                    |                    |
| From name:                          | 12                         | <u>F</u> iles   | <u>K</u> ey in | Configuration      |                    |
| EnglishStationUI                    |                            | J               | 1              |                    |                    |
| To name:                            | A                          | A 4             | 0.1            | <b>1</b>           | <u>M</u> ap        |
| hStationUltimate                    | Map                        |                 | XX             |                    | M <u>e</u> nu      |
|                                     | M <u>e</u> nu<br>Favorites |                 |                |                    | F <u>a</u> vorites |
|                                     | Switch to                  | <u>S</u> urvey  | <u>C</u> ogo   | <u>I</u> nstrument | S <u>w</u> itch to |
|                                     |                            |                 |                |                    | Fatar              |
| Esc                                 | Accept                     | Exit            |                |                    | Enter              |

BEFORE YOU GO TO THE FIELD CHECK THE HORIZONTAL AND VERTICAL ALIGNMENT IMPORTED!

SEE NEXT PAGE.



From Main Menu Select>Key in>Roads /

Select Edit to view Horizontal Alignment points

| 🏄 EnglishStationUl(EnglishStation 🛞 📰 ┥ | é 🖾 🛛 ok           |
|---|--------------------|
| Horizontal alignment                    | 100%               |
| Vertical alignment                      |                    |
| Templates                               | <b></b>            |
| Template positions                      | - 11               |
| Superelevation & widening               |                    |
| Station equations                       |                    |
|   | <u>М</u> ар        |
|   | M <u>e</u> nu      |
|   | F <u>a</u> vorites |
|   | S <u>w</u> itch to |
| Esc Store Review Report                 | Edit               |

Check Coordinates with the plans. Tap Esc.

| 👭 Horizontal element 🛛 🛞 📰 🖣     | 🗧 🖾 🛛 ok           |
|----------------------------------|--------------------|
| Element: Start station:          | 100%               |
| Start point 45+00.000sft         |                    |
| Method:                          | 6                  |
| Key in coordinates 🔻             | -                  |
| Start north: Start east:         |                    |
| 265961.958sft 🕨 1283018.330sft 🕨 |                    |
| Station interval:                | <u>M</u> ap        |
| 0.000sft                         | M <u>e</u> nu      |
|                                  | F <u>a</u> vorites |
|                                  | S <u>w</u> itch to |
| Esc Start Prev Next End          | Store              |

Select road then tap Edit. (notice rxl extention)

| <b>#</b> | Select a road |          |       | 🧭 🗱 🕂 🖾 🖉 | ok |
|----------|---------------|----------|-------|-----------|----|
| Nam      | e             | Size     | Туре/ | Modified  |    |
| Engli    | shStationUI   | 4kb      | .rxl  | 3/17/2010 |    |
| Exist    | Railroad(Ex   | 64kb     | .rxl  | 3/17/2010 |    |
| Gillila  | ndRoad(Gill   | 4kb      | .rxl  | 3/17/2010 | =  |
| I-64 (   | ci(l-64 ci)   | 34kb     | .rxl  | 4/6/2010  |    |
| KY18     | 48(KY1848)    | 8kb      | .rxl  | 3/17/2010 |    |
| KY18     | 48Phasell(    | 10kb     | .rxl  | 3/17/2010 |    |
| KY18     | 48PhaseIII(   | 7kb      | .rxl  | 3/17/2010 |    |
| Ram      | p1_March2     | 7kb      | .rxl  | 3/17/2010 |    |
| Ram      | p3_March2     | 5kb      | .rxl  | 3/17/2010 | -  |
| •        |               |          |       |           | •  |
| Esc      | New Ren       | ame Dele | ete   | Edi       | it |

## Tap Edit

| 🏄 Horizontal elemen | t 💿 🔅 📢 🚾 🛛 ok     |
|---------------------|--------------------|
| Element name        | End station        |
| Start point         | 45+00.000sft       |
| √° Line             | 55+00.000sft       |
|                     |                    |
|                     |                    |
|                     |                    |
|                     |                    |
|                     |                    |
|                     | r                  |
| Esc New             | Delete Accept Edit |

Check the Vertical alignment. Tap Edit

| 🏄 EnglishStationUl(EnglishStatio) 🛞 🗱 🛚 | (f 🖾 🛛 ok          |
|---|--------------------|
| Horizontal alignment                    | 100%               |
| Vertical alignment                      |                    |
| Templates                               |                    |
| Template positions                      |                    |
| Superelevation & widening               |                    |
| Station equations                       |                    |
|   | <u>М</u> ар        |
|   | M <u>e</u> nu      |
|   | F <u>a</u> vorites |
|   | S <u>w</u> itch to |
| Esc Store Review Report                 | Edit               |

Check the Vertical components. Tap Edit.

| 🏄 Vertical element   | 🛞 🗱 📢 🚾 🛛 ok      |  |  |
|----------------------|-------------------|--|--|
| Element name         | Station (VPI)     |  |  |
| Point                | 46+00.000sft      |  |  |
| ී Sym. Parabola      | 50+00.000sft      |  |  |
| ී Sym. Parabola      | 53+00.000sft      |  |  |
| ○ Point 54+50.000sft |                   |  |  |
|                      |                   |  |  |
| Esc New D            | elete Accept Edit |  |  |

If it checks Tap Esc.

| Nertical element                                 | () ⇒ ⇒   | 🗧 🚾 🛛 ok           |
|--|--|--------------------|
| Element:<br>Start point                          |  | 100%               |
| Station (VPI):<br>46+00.000sft<br>Slope in:<br>? | Elevation (VPI):<br>713.791sft  Slope out: 1.3440% | 77                 |
|  |  | <u>M</u> ap        |
|  |  | M <u>e</u> nu      |
|  |  | F <u>a</u> vorites |
|  |  | S <u>w</u> itch to |
| Esc Start Prev                                   | Next End   | Store              |

Tap Esc on each panel until you come back to the Main Menu.