

# Taylor County KAAS

Campbellsville, Kentucky USA

**Lat/Long:** 37-21-29.8000N 085-18-33.9000W  
37-21.496667N 085-18.565000W  
37.3582778,-85.3094167  
(estimated)

**Elevation:** 920.5 ft. / 280.6 m (surveyed)

## 3D View:

RWY 5 [Google Earth](#) RWY 23 [Google Earth](#)

## For Additional Airport Information:

[AirNav: KAAS - Taylor County Airport](#)



## Airport Communications:

CTAF/UNICOM: 122.7  
WX AWOS-3: 121.125 (270-789-1985)  
WX AWOS-3P at 6I2 (17 nm N): 119.725 (859-336-0340)  
APCH/DEP SVC PRVDD BY INDIANAPOLIS ARTCC ON FREQS  
121.175/353.65 (NEW HOPE RCAG).

## Airport Operations:


Airport use: Open to the public  
Activation date: 01/1962  
Control tower: no  
ARTCC: INDIANAPOLIS CENTER  
FSS: LOUISVILLE FLIGHT SERVICE STATION  
NOTAMs facility: LOU (NOTAM-D service available)  
Attendance: MON-FRI 0800-1700  
Wind indicator: lighted  
Segmented circle: yes  
Lights: ACVT REIL RWY 05 & 23; PAPI RWY 05 & 23- CTAF; MIRL RWY 05/23 PRESET ON LOW INTST; INCR INTST - CTAF.  
Beacon: white-green (lighted land airport)  
Operates sunset to sunrise.

## Airport Contact Information:

Phone: 270-789-4182  
Airport Manager:  
Email:

## Airport Accommodations / Area Attractions:

[Airport \(taylorcounty.us\)](#)

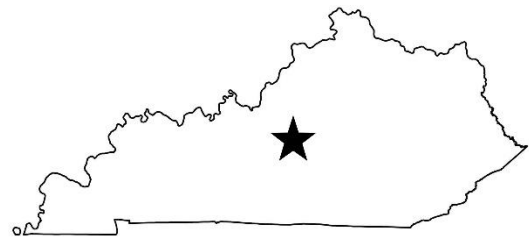

## Airport Services:

Fuel available: 100LL JET-A+  
100LL:FUEL AVBL AFT HR  
WITH CREDIT CARD.  
Parking: hangars and tiedowns  
Airframe service: MINOR  
Powerplant service: MINOR  
Bottled oxygen: NONE  
Bulk oxygen: NONE

## Ground Transportation:

Courtesy Car:  
Shuttle:  
Uber / Lyft:  
Taxi:  
Rental:

## Airport Comments: