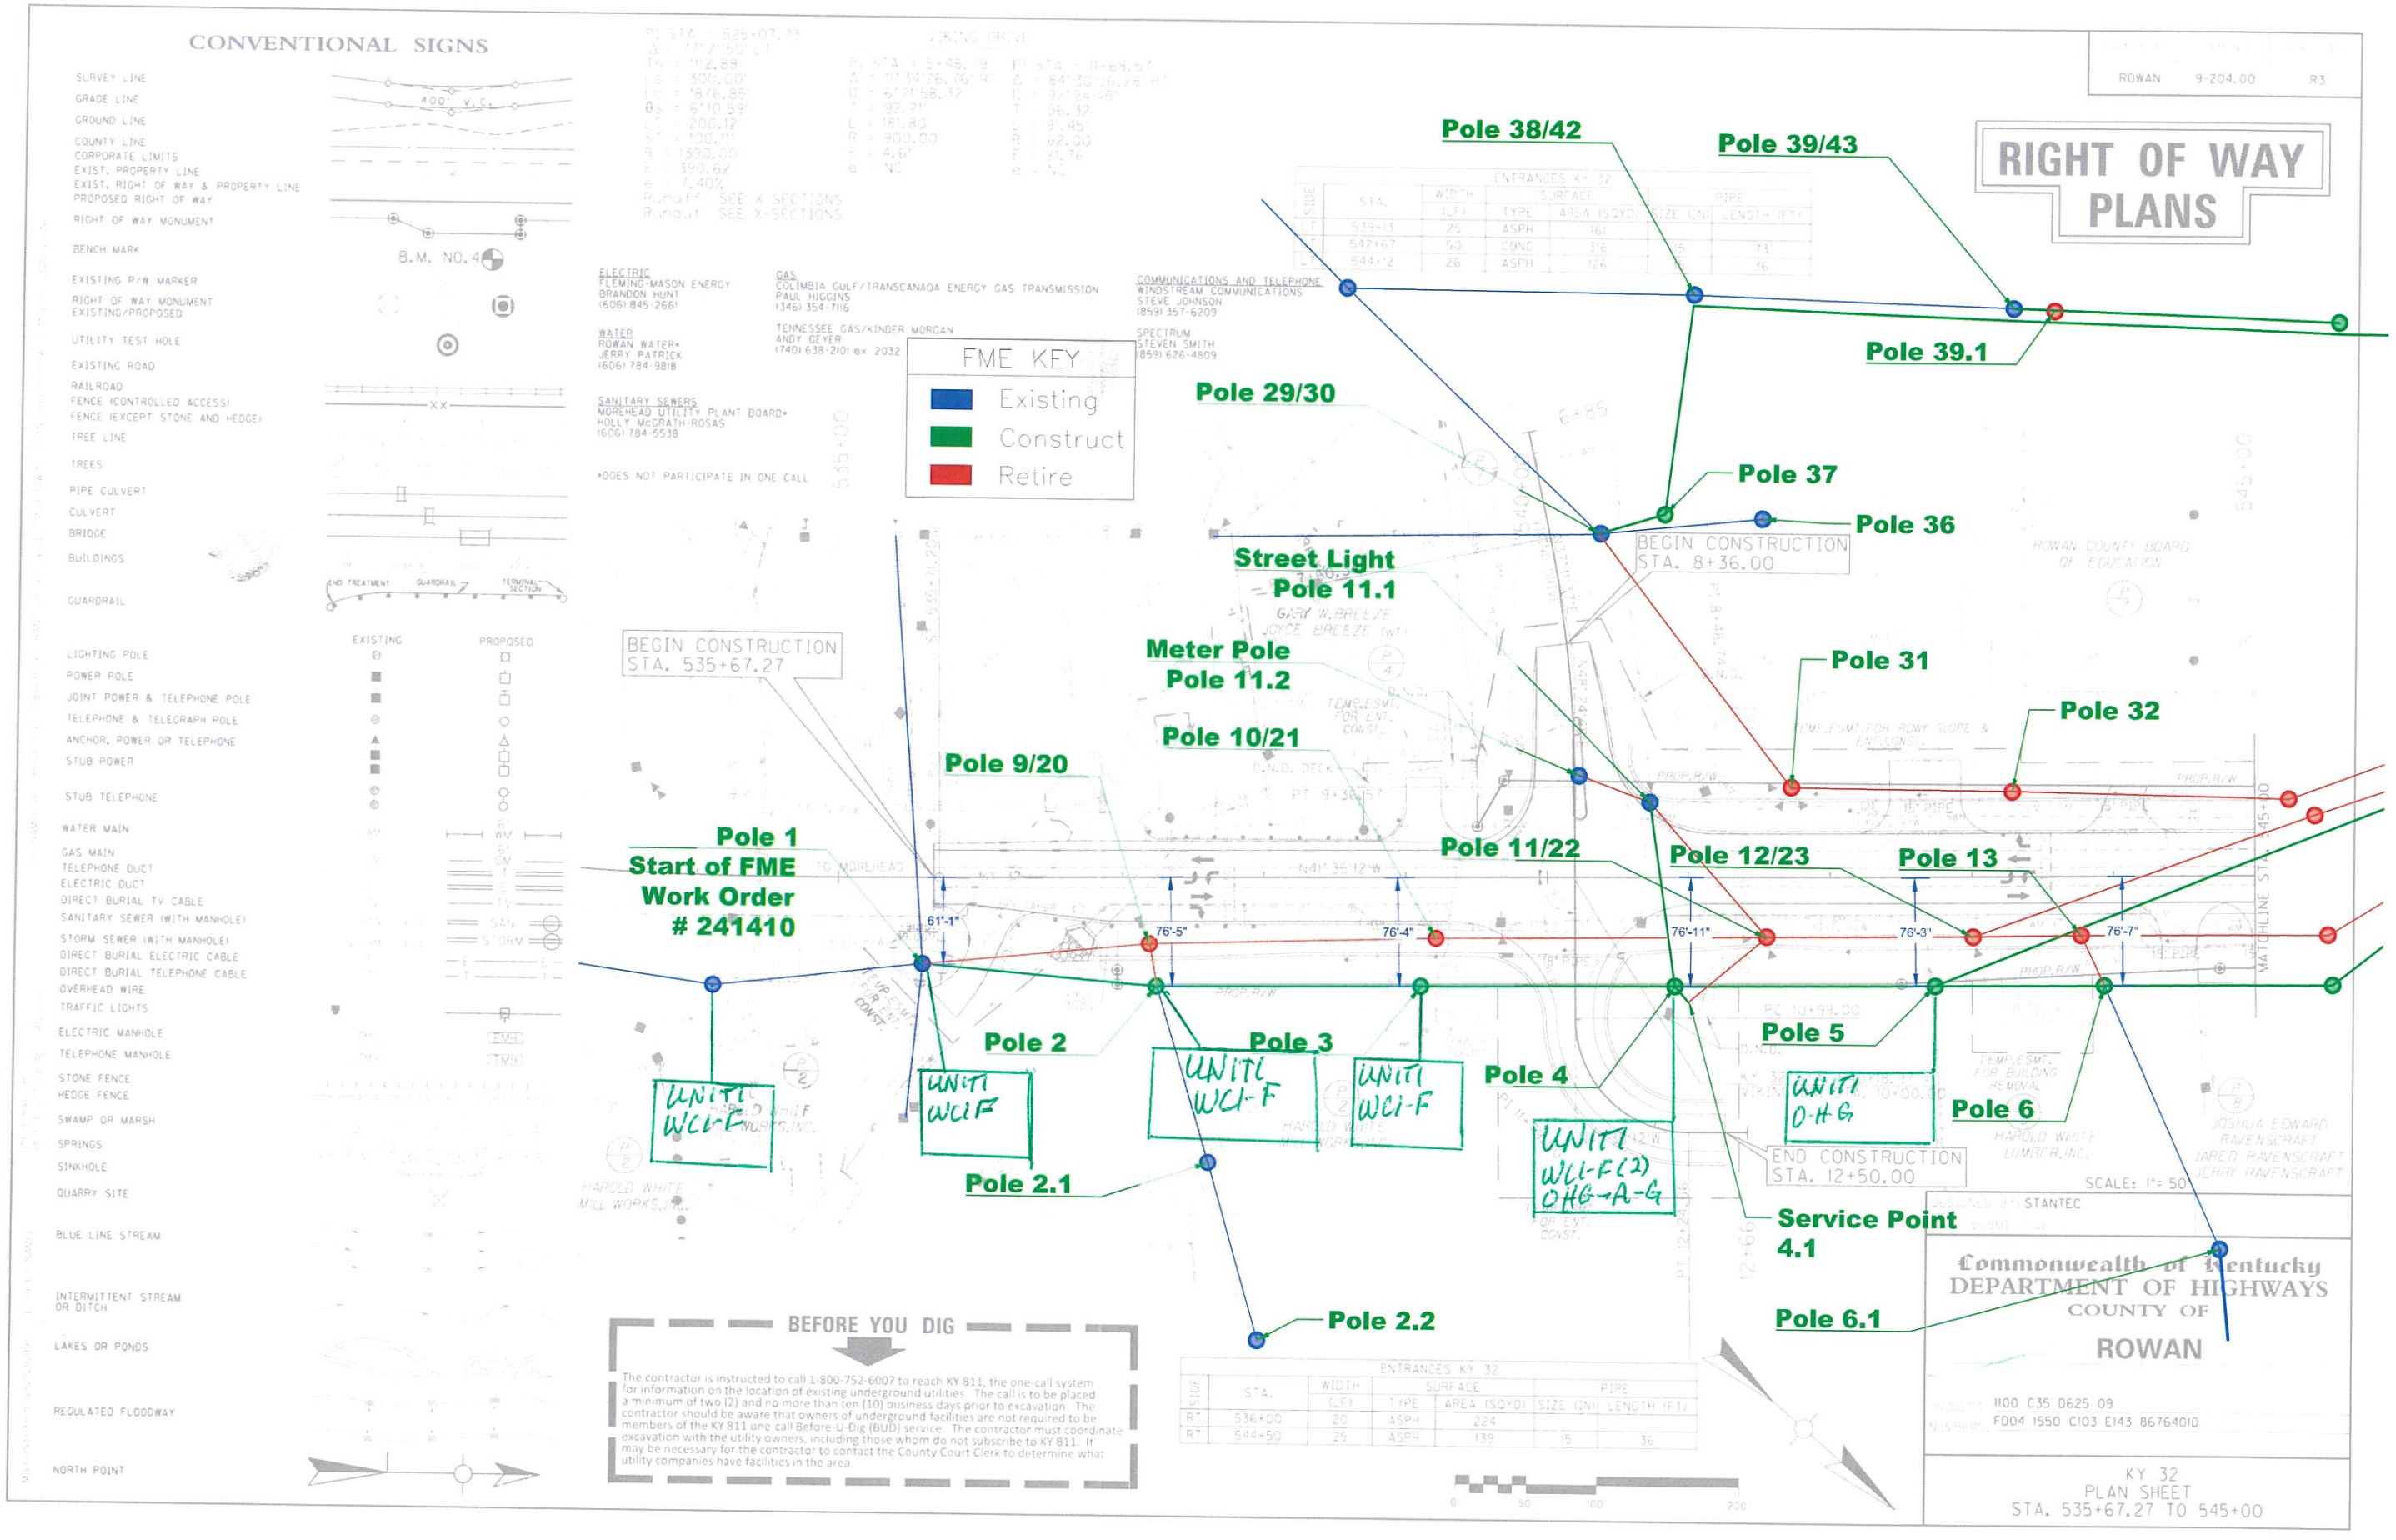
RIGHT OF WAY PLANS
ROWAN 9-204.00 R3
CONVENTIONAL SIGNS
FME KEY
Existing
Construct
Retire
Pole 38/42
Pole 39/43
Pole 39.1
Pole 29/30
Pole 37
Pole 36
Street Light
Pole 11.1
Meter Pole
Pole 11.2
Pole 31
Pole 32
Pole 10/21
Pole 9/20
Pole 1
Start of FME
Work Order
241410
Pole 11/22
Pole 12/23
Pole 13
Pole 2
Pole 3
Pole 4
Pole 5
Pole 6
Pole 2.1
Pole 2.2
Service Point
4.1
Pole 6.1
BEGIN CONSTRUCTION
STA. 535+67.27
BEGIN CONSTRUCTION
STA. 8+36.00
END CONSTRUCTION
STA. 12+50.00
UNITI WCI-F
UNITI WCI-F
UNITI WCI-F
UNITI WCI-F
UNITI WCI-F(2) OHG-A-G
UNITI O-H-G
61'-1"
76'-5"
76'-4"
76'-11"
76'-3"
76'-7"
BEFORE YOU DIG
The contractor is instructed to call 1-800-752-6007 to reach KY 811, the one-call system for information on the location of existing underground utilities. The call is to be placed a minimum of two (2) and no more than ten (10) business days prior to excavation. The contractor should be aware that owners of underground facilities are not required to be members of the KY 811 one call Before-U-Dig (BUD) service. The contractor must coordinate excavation with the utility owners, including those whom do not subscribe to KY 811. It may be necessary for the contractor to contact the County Court Clerk to determine what utility companies have facilities in the area.
Commonwealth of Kentucky
DEPARTMENT OF HIGHWAYS
COUNTY OF
ROWAN
1100 C35 D625 09
F004 1550 C103 E143 86764010
KY 32
PLAN SHEET
STA. 535+67.27 TO 545+00
SCALE: 1" = 50'
STANTEC